


Section IV: Using the Aim8 Keyboard Tablet

Using the system is extremely simple. After you install the Aim8 Text Entry Software (Section II), and complete the product registration (Section III), just follow these steps:


Step 1: Connect the tablet to your computer's USB port.

Step 2: Carefully lift up the plastic document flap on the front of the tablet and place the template of your choice in position under it. The Tifinagh version of this product has 5 templates: Tifinagh Complete Entry System; Tifinagh Keyboard; Arabic Keyboard; French/Latin Keyboard; Transliteration Keyboard.

Step 3: Turn on your computer (Windows 2000, NT or XP operating system) and launch the Microsoft Word software. Open an MS Word document and select the font named "Hapaxber" .

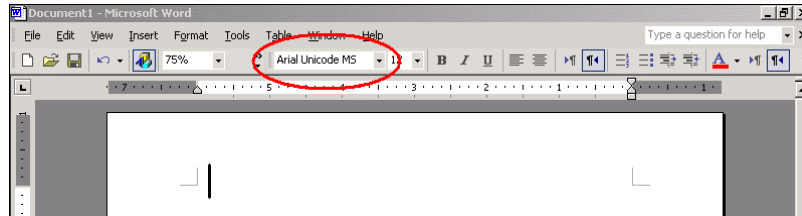

Step 4: Launch the Aim8 program from the Start Menu. This places a tablet icon in the Windows System Tray.

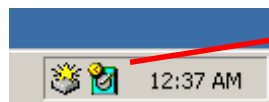

Step 5: Left click the tablet icon to see a list of Tifinagh templates. Select the one that matches the template you earlier put under the document flap.

Step 6: Place the cursor in the word document where you wish to enter text and use the stylus to select characters from the tablet. Before you launch the Aim8 software, the tablet works like a regular digital tablet. However, after you start the Aim8 software, it is only a text entry pad with text and some keyboard functions. In either digital tablet or keyboard state, your regular keyboard continues to operate in the normal fashion. In effect, you now have two freely interchangeable keyboards.

Step 7: To close the Aim8 Keyboard Tablet and return to normal operations, right click on the tablet icon and select the Exit command.